REPAIR BIKE STAND

The hand tools needed for assembly are included with the stand.
The contents of the tool set are:
- Open end wrench 10x13 mm,
- Hexagonal wrench 5,6 mm,
- Crosstip screwdriver PH 2x100

Art. 1693
Code: 616708

The bike repair stand is the basic working tool both for service workshops and enthusiastic amateurs. Servicing and bike maintenance are made easier and simpler by mounting the bike on the stand. The bike stand has a powerful 360° swiveling aluminum vice, which is suitable for tubes with diameters from 22 to 58 mm. For quicker repairs it is possible to adjust the height between 100cm to 160 cm. Maximum load capacity is 19 kg.

The bike stand is easy to assemble and the support tubes are fold together enabling easier transportation between work places.

DOUBLE THREAD CALIPERS

Art. 701 A
Code: 616706

The screw pitch gauges is used for finding out the outside and inside measurements of metric and whitworth threads.

Metric thread:
0.4,0.5,0.7,0.75,0.8,1,1.15,1.5,1.75,2,2.5,
3,3.5,4,4.5,5,5.5,6,6.5,7
Whitworth - thread:
4,4.5,5,6,7,8,9,10,11,12,13,14,16,18,19,
20,22,24,25,26,28,30,32,36,40,48,60,62

SPOKE WRENCH

Art. 1630 A

Code:	Dim.:
616759	3,3 mm
616845	3,45 mm

Spoke wrenches are designed to tighten nipples with flat diameter 3,3 mm and 3,45 mm. The form of wrench enables a perfect fit to the nipples without slippage, and ensures efficient work.

POCKET SPOKE AND FREEWHEEL REMOVER WRENCH

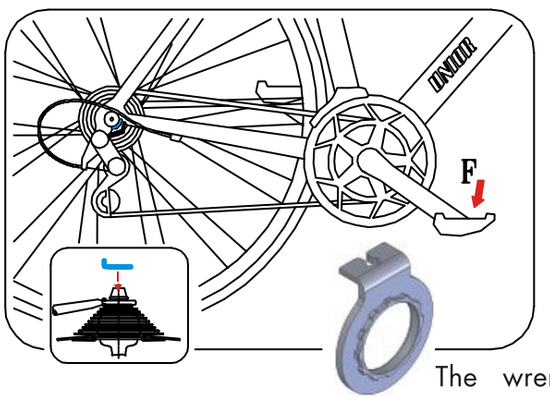

Art. 1669
Code:
616758

The wrench is the basic working tool for cyclists extended tours. To change broken nipples on the right side of the rear wheel, the nuts have to be loosened firstly. The wrench is fitted onto the freewheel nuts and then the pedal is turned. A force of 40Nm is transmitted by the chain, thus enabling the loosening of the nuts and assuring assembly and disassembly of the freewheel and facilitating the exchanging the nipples. The nuts are fitted by turning the wheel backwards by hand.

PEDAL TAPS

Art.:	Code:	Dim.:		
1695.1AR	616553	5/8" x24 mm		right
1695.1AL	616554	5/8" x24 mm		left

TOOL for ALIGNMENT of PEDAL TAPS

Art. 1695...

Art.:	Code:	Dim.:		
1695.3A	616551	5/8" x24		right
1695.4A	616552	5/8" x24		leftl

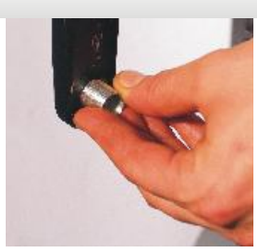

FREEWHEEL REMOVER

The freewheel remover is used for removing and assembling Compagnolo freewheels.

Art. 1670.4
Code:
616707